Yokaiser

Handling Instructions

BANDAI

©BANDAI 1998 MADE IN CHINA

It might be next door...

Light, light. Once
upon a time, when light existed as
light and
darkness was feared as darkness...
humans and youkai lived in
balance with each other.
they fight, and sometimes they help each
other... Modern times. Due to scientific
advances and environmental development, the
balance between light and darkness has been disrupted, and the
children
of the monsters of the past, the "Yo-Kai Kids," have begun
to lurk in our world. They
lurk there confused, unable to distinguish between
good and evil in modern society.

Use the Yo-Kaiser to protect
the Yo-Kai Kids hiding all
over Japan and set off on a journey to find them!

It's all up to you! It's up
to you to guide them to good or evil!!!

Table of contents

1. Name of each part 3

2. Screen Description.....5

3. How to play 6

Power on and time setting.....6

Select starting area, Yo-Kai Kids appear.....

Yo-Kai Kids capture.....8 Regional movement...9

4. Explanation of each mode.....10

Capture mode/party game mode...10

Yokai File Mode...12 Communication Battle Mode...13

Clock mode...17 Pedometer mode...18

Sound mode/region selection mode...19

Contrast adjustment...20

5. How to replace the battery.....21

1.Name of each part

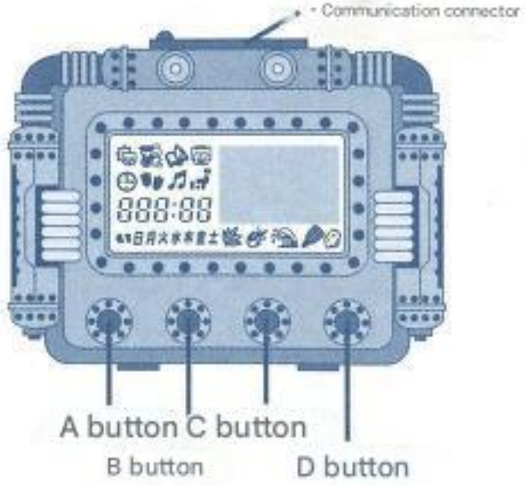

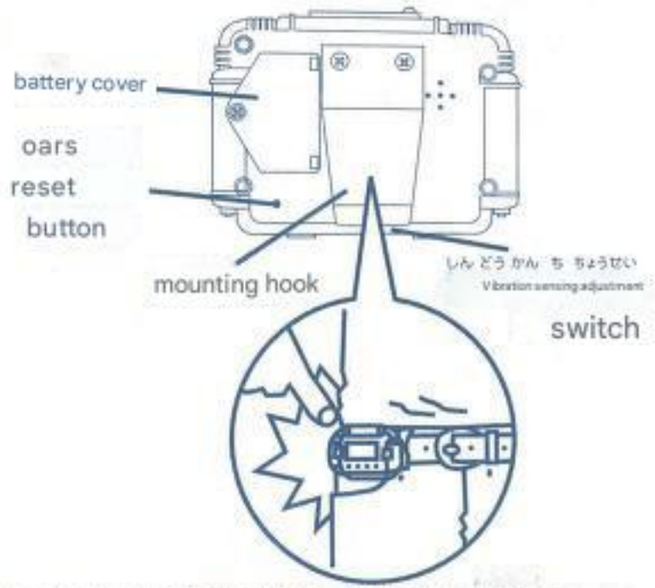

How to install

Attach the attachment hook to a belt, beltless slacks, skirt, training pants, etc., making sure to attach it firmly and without tilting it too far.

The number of steps may not be measured correctly in the following cases:

When the device is tilted and attached to a belt

If you walk in a slip-shouldered manner

● When participating in sports other than walking or jogging

*If the number of steps is being counted too many or too few, adjust it using the vibration detection adjustment switch.

Communication connector: Used to connect to other players.

(Do not connect to toys other than Yokaiser.)

Operation buttons (A button, B button, C button, D button)

A button/Use this to select a mode or to cycle through options. In the capture game, use this as the attack button A. Press this to adjust the screen contrast and make it weaker.

Display Order B Button/Used to confirm the selection of each mode, or to advance the display of Yo-Kai Kids' data. Used as attack button B during the capture game. Press to adjust the screen contrast and make it stronger.

CButton/Cancel button...Use this to cancel each mode.

D button/Use to adjust the contrast. In clock mode, use to correct the time.

When playing online, this button becomes the button for selecting magic.

Vibration detection adjustment switch/You can adjust the strength of step detection by sliding the switch.

Press and hold the All Reset Button/D Button, press the All Reset Button, and then continue to hold the D Button for about one second after releasing the Button to reset all game content.

Auto power off function

If you do not play with Yokaiser for 2 minutes and 30 seconds, the power will automatically turn off. If the power turns off automatically, you can return to the screen before the power was turned off by sensing vibration or pressing any key.

2.Screen explanation

Operation icon

- Capture game icon.....P8
- ☆File icon P12
- ②Clock icon P17
- ♪ Sound icon.....P19
- Party game icon... P10
- Communication Battle Icon...P13
- Pedometer icon... .....P18
- ■ Region selection icon P19

Numerical display section

Normal screen: Number of steps until Yo-Kai Kids appear

Clock mode: Time (24-hour format)/Number of days passed

When File Mode/Record is selected: Online match winning streak record/Highest online match winning streak record

3.How to play

1) Power input

Before playing, remove the insulating sheet from the battery box on the back of the unit and press the All Reset button. The screen will appear about 5 seconds after pressing the Reset button. *If the screen does not appear normally after replacing the batteries, press the All Reset button.

A melody will play and a Yin Yang symbol will appear on the main screen.

2) Time setting

The clock icon will light up and the day icon will flash. Use Button A to select the day of the week and Button B to confirm. Press Button B to move to the next item and enter the hour and minute. The clock will start as soon as the minutes are entered and the time setting is complete.

3) Select the starting area

Once you have finished entering the time, you will automatically be taken to a screen where you can choose the region you want to start the game from. After selecting the region with the A button, press the B button to confirm the starting region. Once you have confirmed the starting region, a message and face of the Yokai Kids you will be traveling with will be displayed, and the game will finally begin.

4) Yokai Kids Appear

The main screen will show an image of you walking, and the number of steps you need to take to meet the Yo-Kai Kids will be displayed on the numeric display. The number of steps will count down as you walk.

When the count reaches 0, the word "Appear" will automatically appear.

5) Capture the Yokai Kids

After the Yo-Kai Kids appear, select the capture mode icon with the A button and press the B button. The head of the Yo-Kai Kids will appear and the "Return"/"Nigeru" selection screen will appear. Select either with the A button and press the B button to confirm.

If you select "Return," the Yo-Kai Kids will tremble and the capture game will begin.

To deal damage to the monsters that appear, press either the A or B button. (Each button has a 50% chance of attacking.)

"Click" ... The Yo-Kai Kids that appeared are collected in a file, and you can view the data of the Yo-Kai Kids in the order of number, name, characteristics, and full-body image. Pressing the B button displays the number of steps to the next Yo-Kai and continues the game.

"Make" - Failed to capture. An image of the Yokai Kids running away will be displayed, and the number of steps to the next Yokai will be automatically displayed.

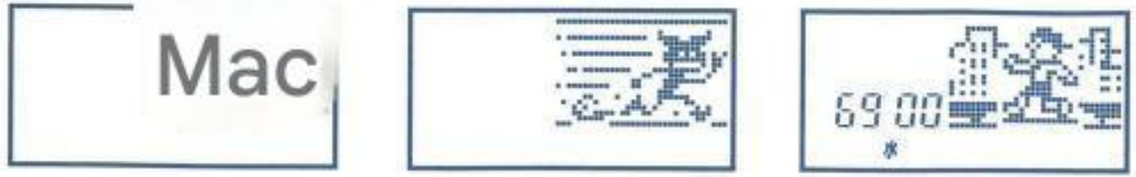

6) Regional movement

Repeat the capture game and capture the boss monster kid hiding in the area, and the area selection screen will automatically appear. Press the A button to select a new area, and press the B button to confirm the new area.

*The goal of this game is to repeat the above steps to capture all of the Yo-Kai Kids hiding in each area and complete the Yo-Kai Kids' File.

*If a Yo-Kai Kid that has already been filed appears, or if a Yo-Kai Kid (Time Yo-Kai) that only appears at certain times appears outside of that time, they will run away before you can capture them.

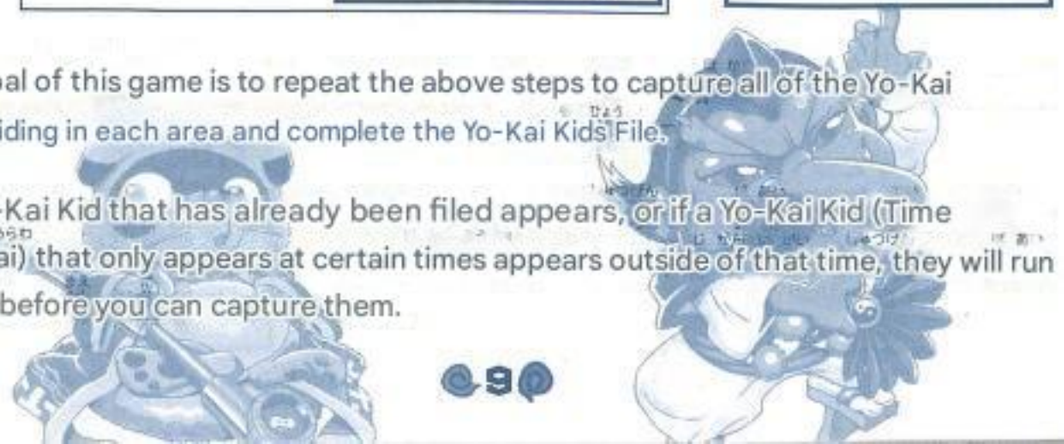

1) 捕獲モード

This is the mode for collecting Yo-Kai Kids in a file. 1. When a Yo-Kai Kid appears, press the A button to select the capture icon and press the B button to confirm. After the head of the Yo-Kai Kid that appeared is displayed, the "Purchase/Discard" selection screen will automatically be displayed.

② Select "Reserve"...Play the capture game. After confirming your selection with the B button, the Yo-Kai Kids' heads will appear again and the capture game will begin.

③ Press either the A or B button to hit the Yo-Kai Kids with magic.

④The battle image screen will be displayed, showing either "Kachi" or "Make."

"Click": The Yo-Kai Kid that appears is collected in a file, and you can view the Yo-Kai Kid's data in the following order: number, name, characteristics, and full-body image. Press the B button to display the number of steps to the next Yo-Kai and continue the game. "Make":

The Yo-Kai Kid's escape screen is displayed, and then the walking screen appears.

⑤ "Nigel" - Choose this when you want to postpone the capture game to the next opportunity.

2) Party Game Mode This is a mode where you play mini games using the Yokai Kids you have created. There are two types of mini games: a race against a running yokai and a game where you chase a thieving yokai.

①Select the Party Game icon with the A Button and press the B Button to confirm and the Party Game screen will be displayed.

②The Yo-Kai Kid file number and name will be automatically displayed, so use the A Button to select the Yo-Kai Kid you want to use and then press the B Button to confirm.

③When the Running Yokai appears, it's the "Running Game", and when the Thief Yokai appears, it's the "Chase Game". Wear the Yokaiser and run. When you hear an electronic sound, the game begins.

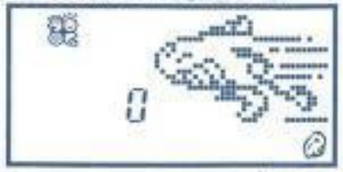

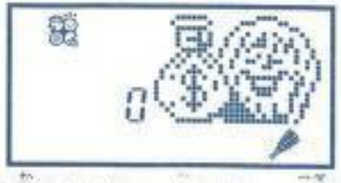

④You win if you catch up with the Yo-Kai Kids within 10 seconds. If you win, the number of steps until the next Yo-Kai Kids appears will be reduced by (the number of steps you ran during the game + 100).

*This is not valid if there are less than 100 steps remaining until you reach Yo-Kai Kids.

⑤ No change will occur if you lose, but if you do not play a mini-game with the Yo-Kai Kids in the file for more than a week, one of the Yo-Kai Kids may escape from the file.

3) Yokai File Mode

You can view the data of your filed Yo-Kai Kids and check your winning streak in online battles.

Use the A button to select the file icon and the B button to confirm, and the "File/Record" selection screen will appear. Use the A button to select either "File" or "Record," and the B button to confirm.

① Select "File" - The Yo-Kai Kid's number and name will be displayed. Use the A button to select the Yo-Kai Kid you want to see, then press the B button to confirm. You can see their characteristics and a full-body image. Press the B button again to go to the number and name screen. Use the C button to return to the "File/Record" selection screen, then press the C button again to return to the walking screen.

② Select "Record" ... The "Rensho/Recital" selection screen will be displayed. Use the A button to select either one. If you select "Rensho", the number display will show how many consecutive wins you have in the online battle.

Select "Best" to display your highest winning streak to date. Press the C button to return to the "File/Record" selection screen, then press the C button again to return to the walking screen.

Vibrations will still be detected while selecting a mode, and the number of steps required for the Yo-Kai Kids to appear will be reduced.

4) Online Battle Mode

In this mode, you can enjoy online battles with other players using the Yo-Kai Kids you have filed. If you beat your opponent, you will get the data of the Yo-Kai Kids you played against and can file it. If you lose the battle, the data of the Yo-Kai Kids you used will be taken away. (If you return to the area where you filed that Yo-Kai Kids, you can catch them again.)

This is the point!

By battling online, you can get the Yo-Kai Kids you missed or those in areas you haven't yet progressed in, so you can progress through the Yo-Kai files more efficiently. Also, since there are Yo-Kai Kids that only appear in the Ghost Road, Mysterious Road, Phantom Road, and Light Road, you must battle online to complete the Yo-Kai Kids file.

①Select the online battle icon with the A Button and press the B Button to confirm, and the online battle screen will be displayed.

② The Yo-Kai Kid's number and name will be displayed automatically, so select it with the A Button, and when the Yo-Kai Kid you want to use appears, press the B Button to confirm.

*If you do not make a selection for 3 seconds, the displayed Monster Kids will be automatically selected.

③When the head of the Yokai Kid you want to use is displayed, use the D Button to select the magic you want to use, then press the B Button to confirm.

④ When [READY OK] is displayed, communication preparation is complete. Connect to another player within one minute. (If you do not connect within one minute or if preparation is not successful, "Connection NG" will be displayed.)

⑤After connecting, data communication will begin when either player presses the D button. "Communicating" will be displayed on both screens, and when data communication is complete, "Connection OK" will be displayed. Once "Connection OK" is displayed, disconnect the device.

*Do not disconnect the device under any circumstances until the "Connection OK" message appears. Also, do not press the D button until "READY OK" is displayed on both devices and the device is connected. If the device is disconnected during the connection process, communication may not be performed properly and you may not be able to continue with your collection normally.

⑥The magic spell used by your opponent will be automatically displayed and the winner will be decided.

⑦ "Click" ... An image of the Yo-Kai Kids coming will be displayed and the data of the Yo-Kai Kids you have acquired will be displayed. Press the B button to return to the walking screen.

"Make"...An image of the Yo-Kai Kids leaving will be displayed.

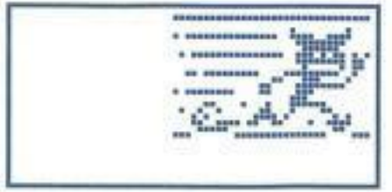

⑧You will automatically return to the walking screen.

*You cannot battle against other Yokai Kids of the same type. ("Connection NG" will be displayed.)

*If there are not two or more Yokai Kids in the file, online battles will not be possible.

Creatures, Yokai Kids and Attributes

The Yo-Kai Kids lurking around the world are classified into five types. The Yo-Kai Kids' attributes are displayed with a magic mark when the Yo-Kai Kids' head is displayed.

Wood magic... defeats water and earth. Fire and lose to the cauldron. "Fire magic... defeats wood and metal. Earth and lose to water. Water magic... metal defeats fire. Wood and lose to earth. Gold magic... defeats earth and wood. Water and lose to fire. "Royal magic... defeats fire and water. Metal and lose to wood.

5) Clock mode

You can see the current time and the number of days that have passed since the device was started.

Select the clock icon with the A Button and press the B Button to confirm, and the "Clock/Day" selection screen will appear. Select one with the A Button and press the B Button to confirm. A clock yokai will appear on the screen.

① Select "Time" ... The current time will be displayed in the numeric display. (24-hour format)

※At this time, you can adjust the time setting by pressing the D button. (See How to Play/Time Setting (p.6))

② Select "Days" ... The number of days since the power was turned on will be displayed in the numeric display.

③ Press Button C to return to the "Time/Day" selection screen, and press Button C again to return to the walking screen.

6) Pedometer mode

The number of steps you have taken so far will be displayed on the numerical display.

Select the pedometer icon with the A button and press the B button to confirm, and the "Total/Reset" selection screen will be

Select one with the A button and confirm with the B button. A foot yokai will appear on the screen.

① If you select "Total"...The current total number of steps will be displayed in the numerical display area.

●(Up to 99999)

② If you select "Reset", the total number of steps you have walked will be reset to 0.

③ Press Button C to return to the "Total/Reset" selection screen, and press Button C again to return to the walking screen.

7) Sound mode

Select whether to turn the sound on or off. Select the sound icon with the A button and press the B button to confirm, and the "On/Off" selection screen will be displayed. Select either with the A button and press the B button to confirm. Return to the walking screen.

8) Region Selection Mode

Once you capture the boss monster kid in the area you are in and clear that area, the area selection screen will automatically appear.

① Select "Start"... Each time you press the A button, the areas you have not yet cleared will flash. Select the area you want to move to with the A button, and confirm with the B button. The walking screen will automatically appear.

"Go" ... Each time you press the A button, the area you have already cleared will flash. Select the area you want to move to with the A button and confirm with the B button. The walking screen will automatically appear.

*However, if you have not yet cleared the area you are in, you will not be able to move to that area. When you select this mode, the area you are currently in will flash and you will automatically return to the walking screen.

Point This is the point!

If you select "Ido"

and move to another region, but the region selection screen is still displayed, this means that you have already filed all of the Yo-Kai Kids in that region.

9) Contrast adjustment

Adjusts the LCD screen brightness.

1. Press the D button when the walking screen is displayed.

② The Anglerfish Yokai will appear. Press the A Button to lighten the screen, and the B Button to darken the screen.

③ Press the C button to return to the walking screen.

5. How to replace the battery

When the battery is low, the battery warning indicator will light up, the keys will not work, and the display will go out. If the battery warning indicator lights up, replace the batteries as soon as possible. (Your collected data will be lost.)

Before replacing the battery, please read the precautions below carefully.

①④ Use a screwdriver to remove the screws and remove the lid.

②Insert the button battery (LR44) while checking the positive date as shown in the illustration, then close the lid and tighten the screws.

*Batteries should be replaced by a parent or guardian. When the display is off, replace the batteries as quickly as possible (within 30 seconds) without operating the device. If you take too long to replace the batteries, your data may be lost.

Uses 2 button batteries (LR44) (included)
Battery life: Approximately 3 months if used 1 hour per day

*Battery life will vary depending on how you play.

*After replacing the battery, do not press the all reset button unless there is an abnormality.

(If you press and hold the D button while pressing the All Reset button, and then continue to press the D button for about one second after releasing the button, the file will start over from the beginning.)

▲ NOTE

To parents: Please read this.

- Take care (especially by children under 3 years of age) to prevent accidental swallowing of button batteries (LR44), battery covers, screws, etc.

<If the battery is used improperly, it may overheat, explode or leak. Please take note of the following:

- Batteries (LR44) should be replaced by a parent or guardian.
- Do not mix old and new batteries or different types of batteries.
- ⊕⊖ Set the (plus and minus) correctly.
- Do not short circuit, charge, disassemble, heat, or place in fire.

If a button battery (LR44) is swallowed or if liquid leaking from a button battery (LR44) gets into your eyes, consult a doctor immediately. If the liquid gets on your skin or clothes, wash it off with water.

Precautions for use:

This product is made up of precision electronic components. Do not drop it, get it wet, soil it, or disassemble it. Also, avoid using or storing it in places subject to high or low temperatures.

<Disclaimer>

At Bandai, we are constantly researching, investigating, and improving our products in order to provide safer and more enjoyable toys. Please note that there may be slight differences in the same product depending on the time of purchase.

<To our customers>

If you have any questions about the product, please contact our Customer Service Center. Please be sure to tell us your address, phone number, and the names and ages of the parent or guardian and child.

Bandai customer consultation center

(Kanto) Kashiwa City Toyoshiki 241-22 〒277-8511

☎0471-46-0371

(Kansai) 4-12-3 Toyosaki, Kita-ku, Osaka 531-0072

☎06-375-5050

(Central) Nagoya City, Showa Ward, Gokiso 3-2-5466-0051

☎052-872-0371

- Telephone reception hours: Monday to Friday (Excluding public holidays) 10:00-16:00
- Please check the phone number carefully to avoid any mistakes.

Publisher

Bandai Co., Ltd.

Electronics Division

2-5-4 Komagata, Taito-ku, Tokyo 111-8081